


KitchenAid®

OVEN PARTS

For Models: KEMC377KBL0, KEMC377KWH0, KEMC377KAL0, KEMC377KBS0
(Black) (White) (Biscuit) (Black Stainless)

27" BUILT-IN ELECTRIC
DOUBLE OVEN
THERMAL CONVECTION LOWER
CRISPWAVE MICROWAVE UPPER

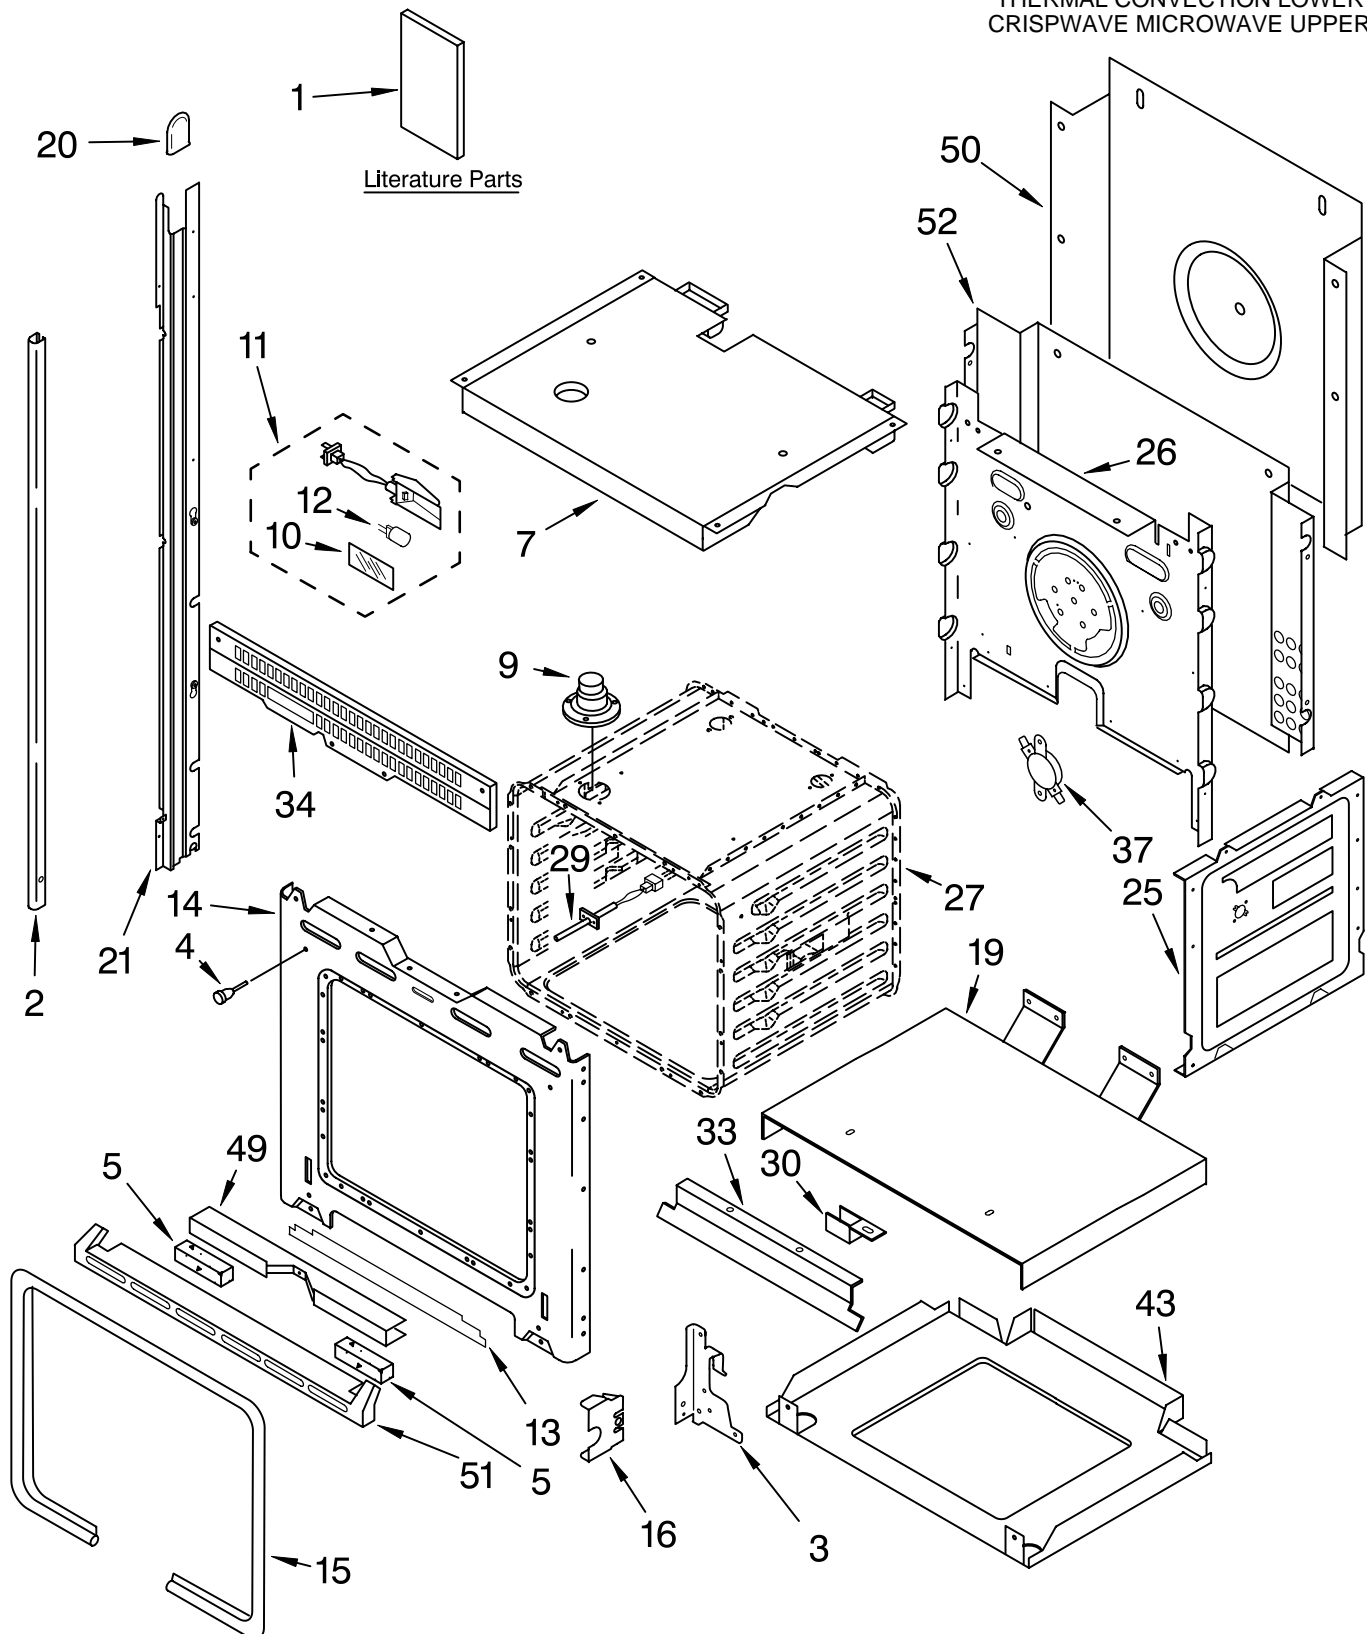

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Models: KEMC377KBL0, KEMC377KWH0, KEMC377KAL0, KEMC377KBS0

(Black)

(White)

(Biscuit)

(Black Stainless)

Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.		
1		Literature Parts
	LIT8300653	Installation Instructions
	LIT8300953	Use & Care Guide (Oven)
	LIT8300890	Use & Care Guide (Microwave)
	LIT4450786	Cooking Guide (Label)
	LIT4449066	Cookbook (T/C Oven)
	LIT4452295	Tech Sheet (Oven)
	LIT4449264	Easy Set Guide (Oven)
	LIT4451052	Guide, Easy Use (Microwave)
2	LIT3191638	Safer Cooking Tips
		Trim, Side
	4455430	RH Black
	4455432	RH White
	4455434	RH Biscuit
	4455431	LH Black
	4455433	LH White
	4455435	LH Biscuit
	8281236	Screw

Illus. No.	Part No.	DESCRIPTION
3		Hinge Reciever
	4455605	Left Hand
	4455606	Right Hand
4	4448520	Bumper, Door
5	4452490	Spacer, Foam
7	4455864	Top Chassis
	4449809	Screw
9	4452158	Tube, Vent
	3196176	Screw
10	4452163	Lens, Light
11	4448972	Oven Light Assy
	4449748	Screw
12	4452164	Bulb, Light
13	4452336	Insulator, Bottom Vent
14	4455611	Frame, Front
	4449040	Screw
15	4455381	Gasket, Door
16	4452152	Bracket, Mounting
19	4451477	Support, Insulation
	4449809	Screw
20	4451605	Cap, Spacer
21		Rail, Side
	4450583	Right Side
	4450584	Left Side
	4448444	Grommet
	4449154	Screw
25	4455641	Side, Chassis (R.H. & L.H.)
	4449809	Screw
26	4452233	Back, Chassis
	4449809	Screw
27		Liner, Oven (Not serviceable)

Illus. No.	Part No.	DESCRIPTION
29	4455636	Sensor
	4449154	Screw
30	4449845	Bracket, Support
	4449809	Screw
33	4452495	Deflector, Vent
34	4451666	Vent, Center
	4450038	Screw
	3400832	Screw
37	4451442	Thermostat (TOD) (Temp.) SPST
	4449809	Screw
43	4455529	Base, Chassis
	4449809	Screw
49	4448933	Retainer, Gasket
	4449154	Screw
50	4451747	Cover, Back
	4449809	Screw
51		Trim, Bottom
	4455442	Black
	4455444	White
	4455446	Biscuit
	3400832	Screw
52	4451755	Chassis, Back

FOLLOWING PARTS NOT ILLUSTRATED


INSULATION

4449315	Insulation, Wrap
4450364	Insulation, Back

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: KEMC377KBL0, KEMC377KWH0, KEMC377KAL0, KEMC377KBS0
(Black) (White) (Biscuit) (Black Stainless)

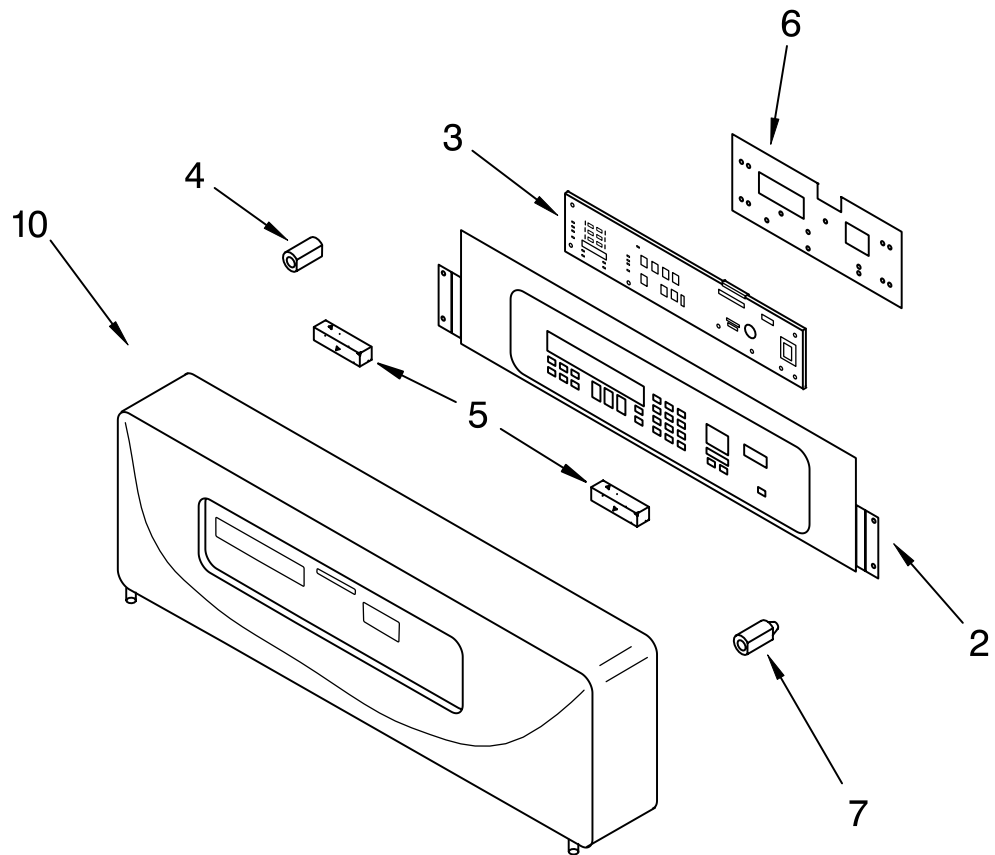

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

2	8300877	Switch, Membrane
	8300878	Black
	8300879	White
	8300879	Biscuit
3	4453377	Microcomputer
	4449745	Screw
4	4452249	Insulator, Board Support
5	4452260	Spacer, Foam
6	4452345	Insulator, Dielectric
7	4452248	Insulator, Board
10	4452602	Panel, Control
	4452603	Black
	4452603	White
	4452973	Biscuit
	3400406	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN DOOR PARTS

For Models: KEMC377KBL0, KEMC377KWH0, KEMC377KAL0, KEMC377KBS0
(Black) (White) (Biscuit) (Black Stainless)

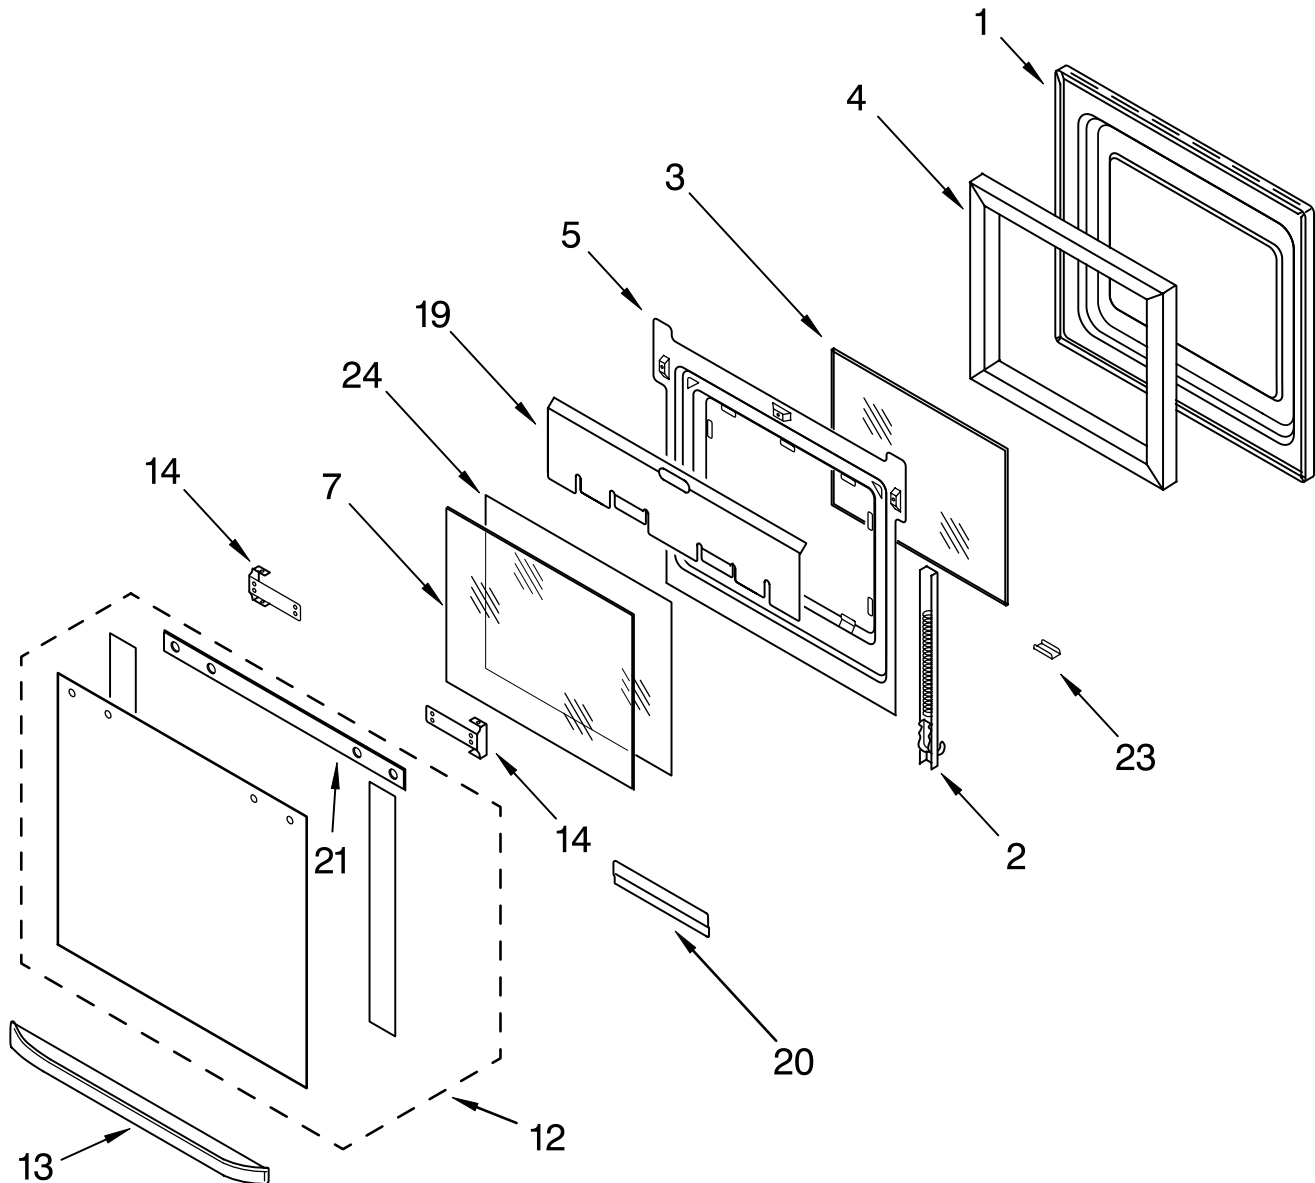

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	4455617	Door Liner
2		Hinge, Door
	8300571	R.Side
	8300572	L.Side
	4449743	Screw
3	4449253	Glass, Inner

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

4	4451721	Insulation, Door
5	8300777	Retainer, Glass
	4449809	Screw
7	4449257	Glass, Inner
12		Door Glass, Assy
	4455393	Black
	4455392	White
	4452258	Black-Stainless
	4455394	Biscuit
13		Door Handle
	4452500	Black
	4452501	White
	4452870	Biscuit
14		Bracket, Handle
	4452959	R.Hand
	4452960	L.Hand
	4451040	Screw


Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

19	4450361	Shield, Heat
	4449809	Screw
20	4451668	Retainer, Glass
	4449809	Screw
21	4452325	Seal, Door Top
23		Retainer, Glass-Clip
	4450863	Black
	4450864	White
	4452119	Biscuit
	3400832	Screw
24	4455256	Glass, Inner

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

LATCH PARTS

For Models: KEMC377KBL0, KEMC377KWH0, KEMC377KAL0, KEMC377KBS0
(Black) (White) (Biscuit) (Black Stainless)

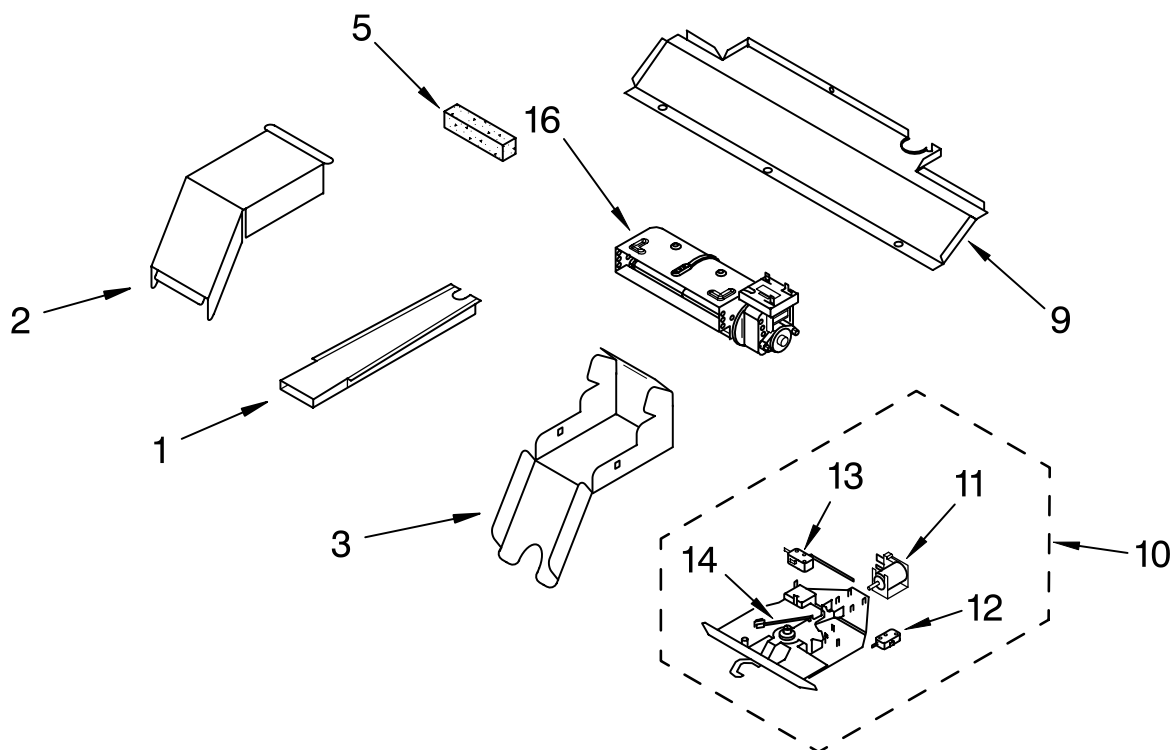

Illus. No.	Part No.	DESCRIPTION
---------------	-------------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	4451759	Vent, Exhaust
2	4455178	Elbow, Vent-Top
3	4455177	Elbow, Vent-Bottom
5	4451758	Seal, Foam
9	4450407	Baffle, Rear
	4449809	Screw
10	8300960	Latch Assy.
11	4451663	Solenoid
12	4452312	Micro Switch N.C.
13	4451426	Micro Switch
14	4451537	Spring, Latch
16	6610168	Blower
	4455191	Plate, Service

IMPORTANT PRODUCT SAFETY INFORMATION

ADVISE CONSUMERS OF AN ELECTROCUTION HAZARD WITH DO-IT-YOURSELF REPAIRS OF MICROWAVE OVENS.


The U.S. Consumer Product Safety Commission warns against do-it-yourself repairs of microwave ovens. Microwave ovens use high voltage which makes it particularly hazardous for consumers to remove the cover and touch electrical parts.

STRONGLY RECOMMEND THAT CONSUMERS HAVE PROFESSIONALS REPAIR MICROWAVE OVENS.

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INTERNAL OVEN PARTS

For Models: KEMC377KBL0, KEMC377KWH0, KEMC377KAL0, KEMC377KBS0
(Black) (White) (Biscuit) (Black Stainless)

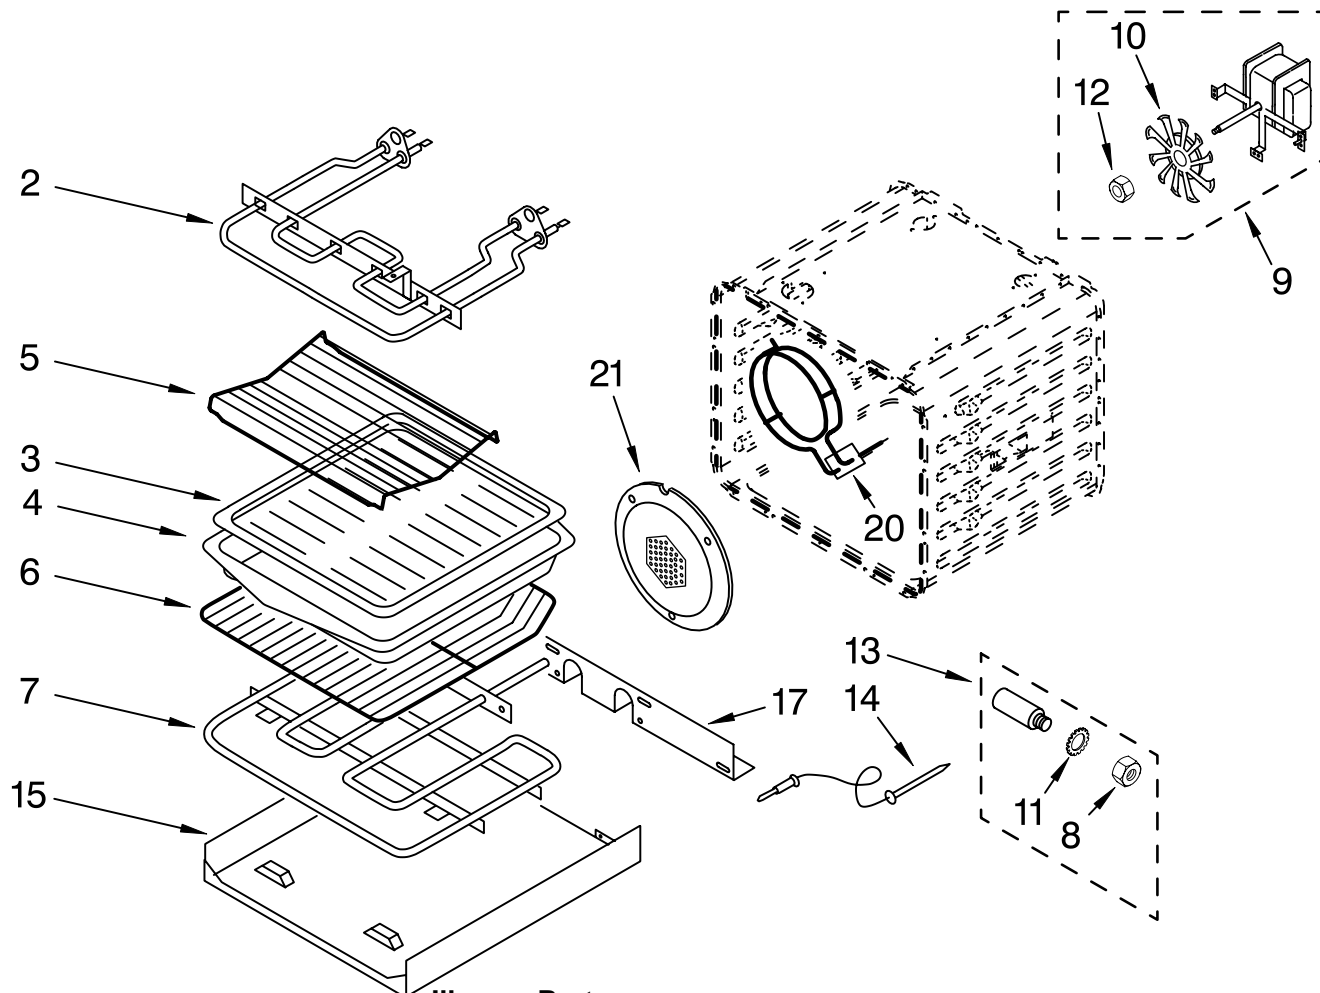

Illus. No.	Part No.	DESCRIPTION
2	4452156	Element, Broil
	4449154	Screw
3	3147563	Grill, Broiler
4	3147845	Pan, Broiler
5	3181534	Rack, Roasting
6	4448715	Rack, Oven
7	4452155	Element, Bake
8	4448881	Nut, Hex
9	4451583	Convection Motor
	4449154	Screw
10	4452226	Blade, Fan
11	4448882	Washer, Lock
12	4452227	Nut
13	4451355	Jack, Meat Probe
14	4448948	Probe, Meat
15	4455036	Tray, Bake
17	4450039	Cover, Bake Tray
	4449809	Screw
20	4452157	Element, Convection
	4449154	Screw
21	4448418	Cover, Fan
	4449154	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET AND STIRRER PARTS


For Models: KEMC377KBL0, KEMC377KWH0, KEMC377KAL0, KEMC377KBS0

(Black)

(White)

(Biscuit)

(Black Stainless)

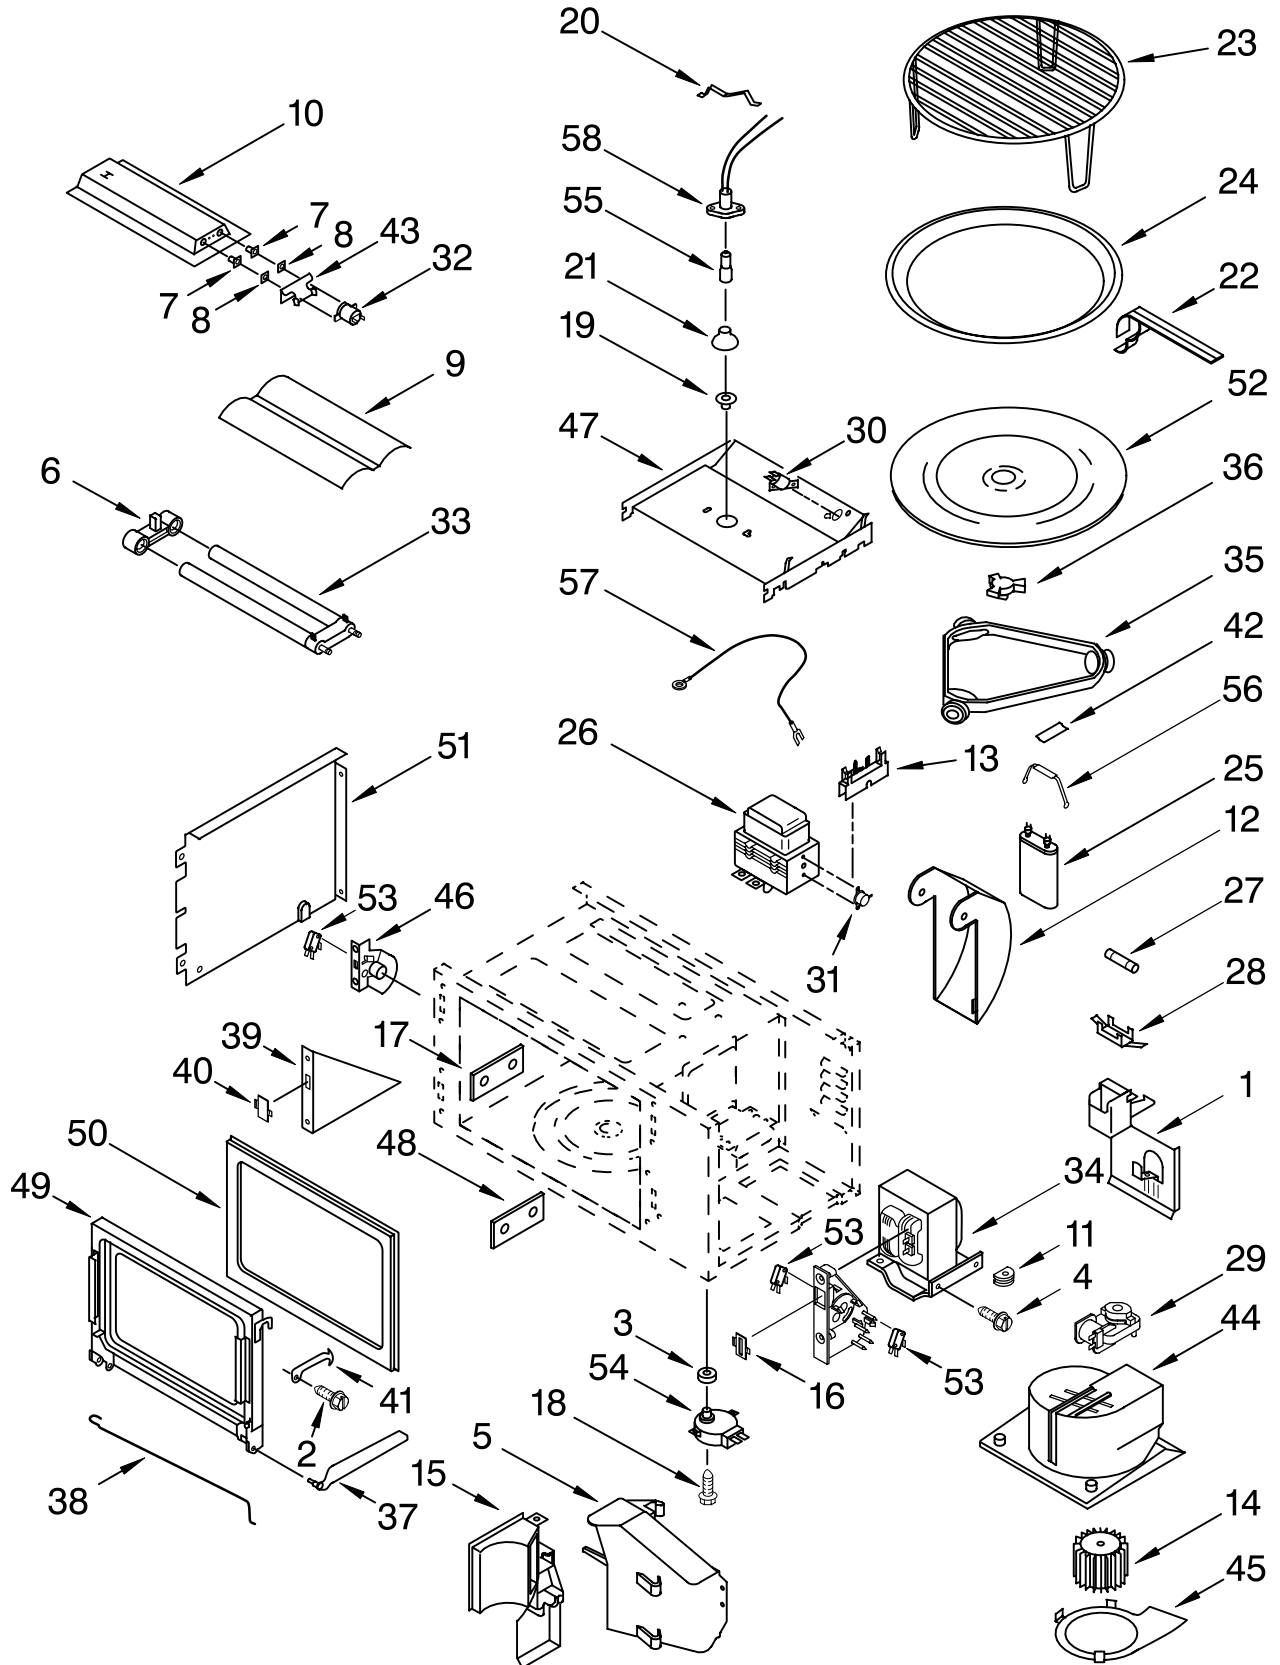

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET AND STIRRER PARTS

For Models: KEMC377KBL0, KEMC377KWH0, KEMC377KAL0, KEMC377KBS0

(Black)

(White)

(Biscuit)


(Black Stainless)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	4375299	Bracket, Capacitor	22	4378400	Pan Handle	40	4375329	Inlet
2	4375313	Screw	23	4375276	Rack	41	4375330	Door Strap
3	4375037	Rubber Ring	24	4375191	Crisp Plate	42	4375331	Grill Plate
4	4375038	Screw	25	4375020	Capacitor	43	4375332	Bracket, Thermostat
5	4375314	Air Duct, Magnetron	26	4375072	Magnetron	44	4375333	Fan Cap
6	4375253	Support, Tube	27	4375321	Fuse	45	4375334	Fan Cap Bottom
7	4375254	Plug, Ceramic	28	4375231	Block, Fuse	46		Holder, Switch
8	4375255	Bushing	29	4375278	Motor, Blower		4375335	Left
9	4375256	Reflector	30	4375279	Thermostat		4375336	Right
10	4375257	Chamber, Reflector	31	4375079	Thermostat	47	4375337	Isolation Plate
11	4375315	Damper	32	4375281	Thermostat	48	4375338	Cover Plate (Lower)
12	4375260	Duct, Inlet	33	4375282	Q Tube Assembly	49	4375339	Door Plate
13	4375316	Insulation, Switch	34	4375286	Transformer	50	4375340	Inner Frame
14	4375322	Fan Wheel	35	4375344	Ring Assembly	51		Plate, Side
15	4375317	Duct, Air	36	4375345	Shaft		4375342	Left
16	4375264	Block, Slide	CABINET PARTS				4375341	Right
17	4375248	Cover Plate, Upper	37		Hinge, Door	52	4375343	Turntable
18	4375035	Screw		4375323	Left Side	53	4375346	Switch
19	4375318	Lens, Lamp		4375324	Right Side	54	4375347	Motor, Turntable
20	4375319	Spring	38	4451008	Torsion Spring	55	4375348	Light
21	4375320	Reflector	39		Bracket, Hinge	56	4375349	Rectifire
				4375327	Left	57	4375350	Cable
				4375328	Right	58	4375351	Lamp Holder

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MICROWAVE COMPARTMENT PARTS

For Models: KEMC377KBL0, KEMC377KWH0, KEMC377KAL0, KEMC377KBS0
(Black) (White) (Biscuit) (Black Stainless)

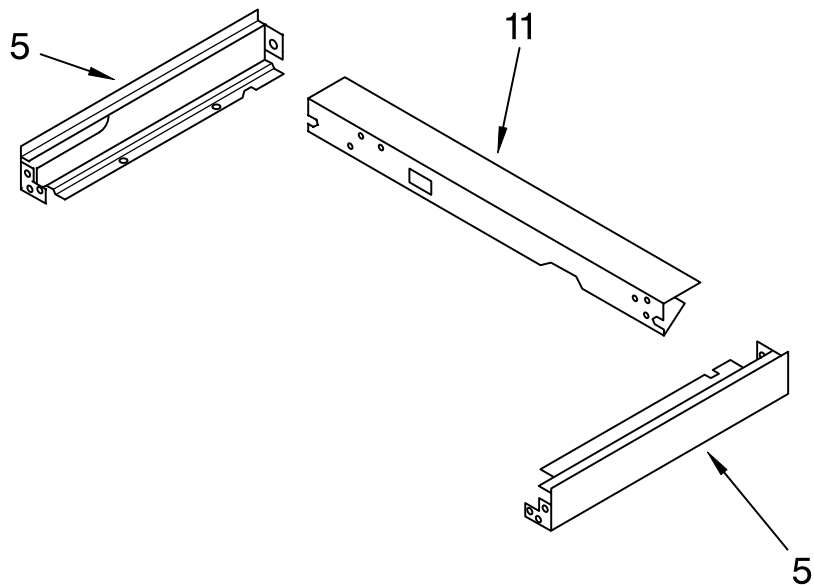


Illus. No.	Part No.	DESCRIPTION
5	4452551	Support Rails Right Side
	4452552	Support Rails Left Side
	4449809	Screw
	4449809	Screw
11	4452547	Rear Channel
	4449809	Screw
	4449154	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP VENTING PARTS

For Models:KEMC377KBL0, KEMC377KWH0, KEMC377KAL0, KEMC377KBS0
(Black) (White) (Biscuit) (Black Stainless)

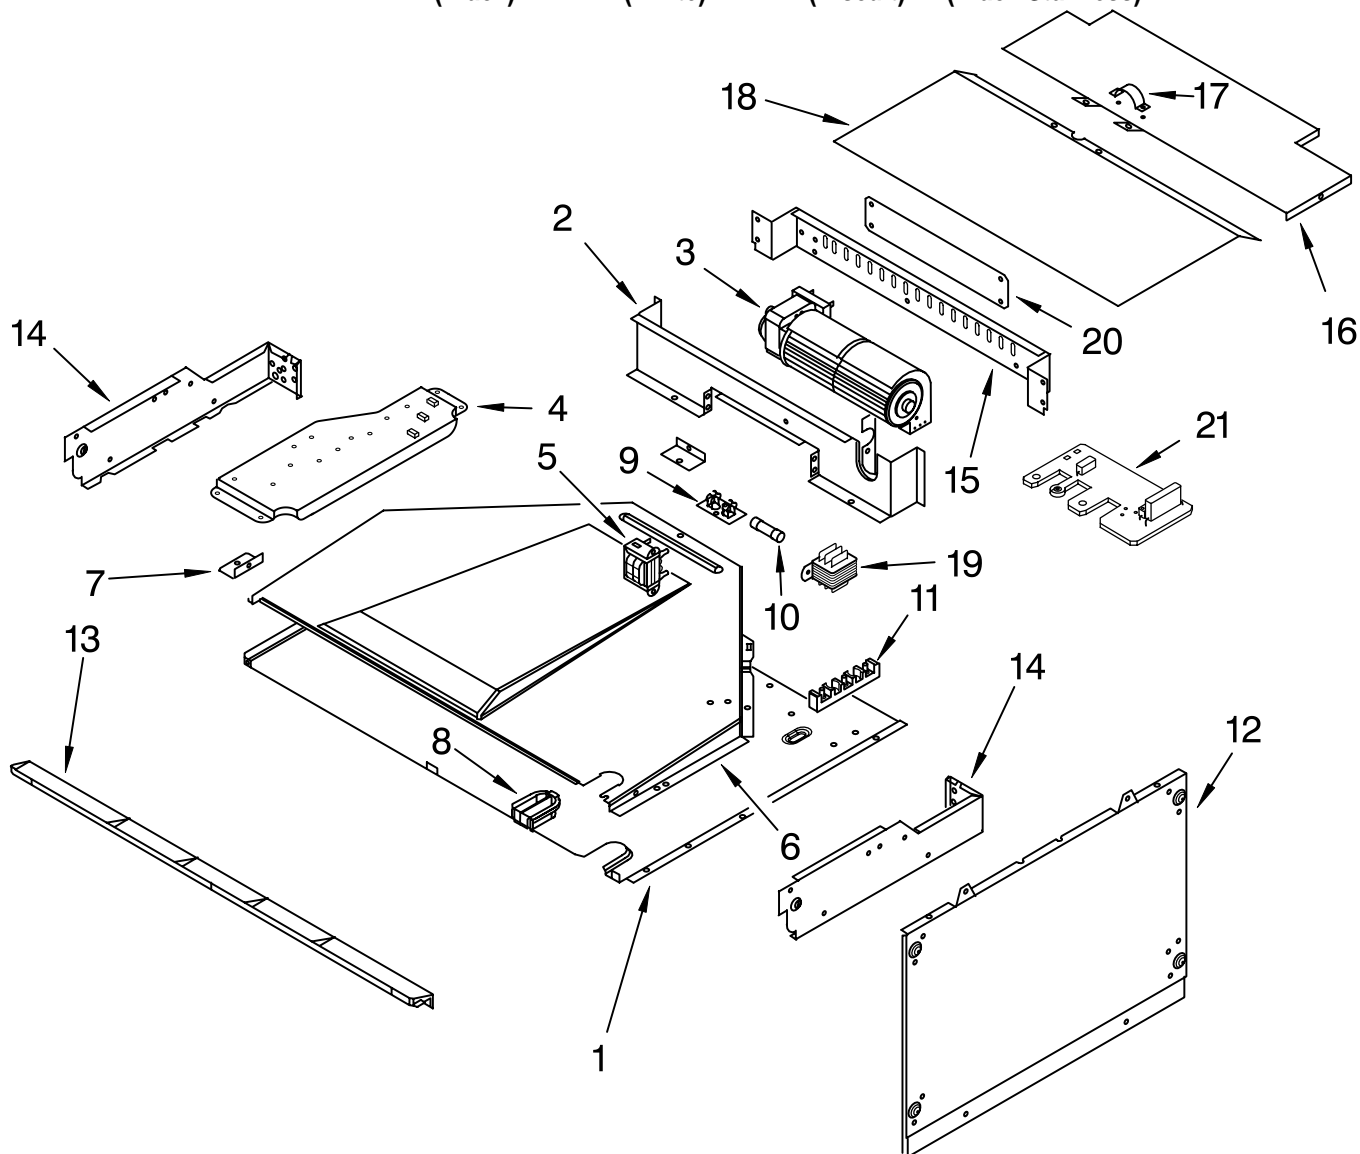

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	4450377	Cover, Top
	4449809	Screw
2	4448935	Baffle, Blower
	1180485	Screw
3	4450920	Blower
	4449809	Screw
4	4451789	Plate, Mounting Transformer
5	6610122	Transformer, (Lights)
	4449809	Screw

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

6	4450366	Exhaust Duct
7	4450027	Bracket, Duct
8	4449964	Grommet
	4449809	Screw
	112432	Nut
9	4454949	Holder, Fuse
	4449154	Screw
10	4454976	Fuse
11	4449868	Block, Terminal
	3400080	Screw
12	4452559	Side, Combo
	4449809	Screw
13	4450787	Vent, (Control Panel)
	4450038	Screw


Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

14		Side, Control Top
	4451597	Right
	4451598	Left
	4449809	Screw
15	4452244	Back, Control
	4449809	Screw
16	4450550	Cover, Top Rear
	4449809	Screw
17	4448664	Clamp
	4449809	Screw
18	4452366	Cover, Top Front
	4449809	Screw
19	4455038	Transformer, Control Panel
20	4452247	Plate, Cover
	4449809	Screw (4)
21	4451934	Suppressor

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MICROWAVE DOOR PARTS

For Models: KEMC377KBL0, KEMC377KWH0, KEMC377KAL0, KEMC377KBS0
(Black) (White) (Biscuit) (Black Stainless)

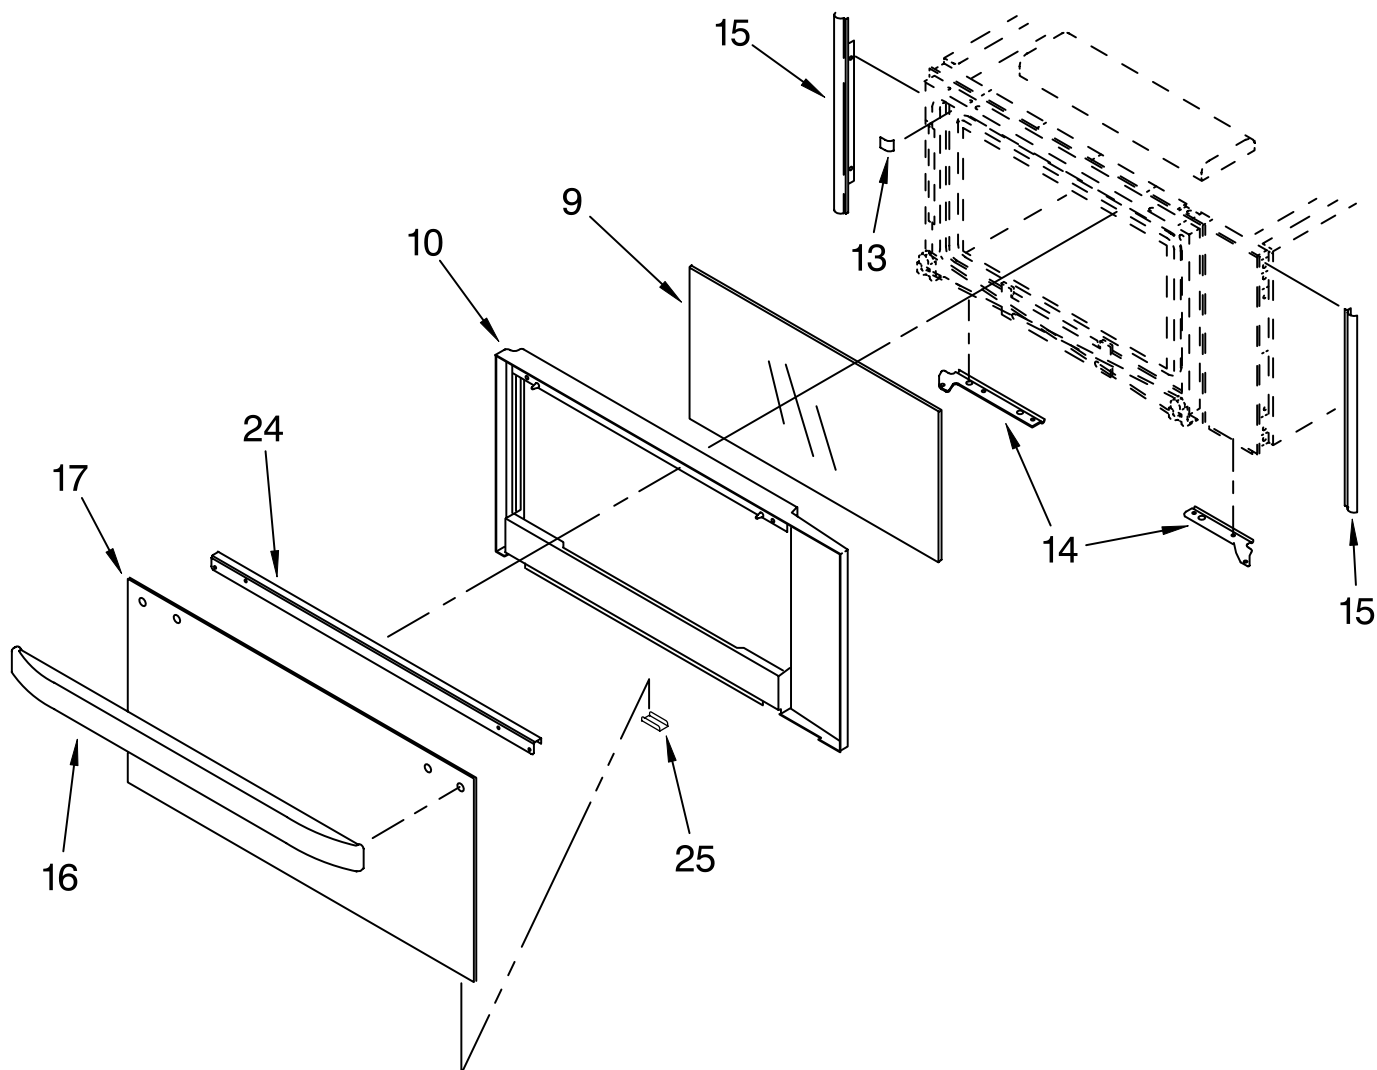

Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.		
9	4448937	Glass, Middle
10	4450945	Frame, Door
	4450038	Screw
13	4450265	Tape, Foam
14		Bracket, Mounting
	4449141	Right Side
	4449142	Left Side
	4449809	Screw

Illus. No.	Part No.	DESCRIPTION
15	4449083	Filler, Side
	4449809	Screw
16		Handle, Door
	4452500	Black
	4452501	White
	4452870	Biscuit
	3196184	Screw
17		Glass, Outer
	4452210	Black
	4452788	White
	4452994	Biscuit
	4452258	Black-Stainless

Illus. No.	Part No.	DESCRIPTION
24		Bracket, Handle
	4452330	Black, White, Biscuit Models
	4450960	Black Stainless Model
	4451040	Screw
25		Retainer, Glass-Clip
	4450863	Black
	4450864	White
	4452119	Biscuit

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MISCELLANEOUS PARTS

For Models:KEMC377KBL0, KEMC377KWH0, KEMC377KAL0, KEMC377KBS0
(Black) (White) (Biscuit) (Black Stainless)

Illus. No.	Part No.	DESCRIPTION
---------------	-------------	-------------

PAINT, TOUCH-UP (1/2oz.)

72017	White
261869	Cord Brown
72032	Black
4392899	Biscuit

PAINT, SPRAY

350930	White
261900	Citrine White
830864	Black
4392901	Biscuit

ADHESIVE

591014	Adhesive Loctite (1/3 oz.)
482338	Sealer, Silastic (3 oz.)

Illus. No.	Part No.	DESCRIPTION
---------------	-------------	-------------

SPLICING WIRES---25FT.

LENGTH

242828	Wire (12 Ga. 150 c Black)
242820	Wire (14 Ga. 150 c Black)
242821	Wire (14 Ga. 150 c Blue)
242822	Wire (14 Ga. 150 c Brown)
242830	Wire (14 Ga. 200 c Brown)
242823	Wire (14 Ga. 150 c Green)
242824	Wire (14 Ga. 150 c Orange)
242829	Wire (12 Ga. 150 c Red)
242825	Wire (14 Ga. 150 c Red)
242831	Wire (14 Ga. 200 c Red)
242826	Wire (14 Ga. 150 c White)
242827	Wire (14 Ga. 150 c Yellow)
242832	Wire (14 Ga. 200 c Yellow)

Illus. No.	Part No.	DESCRIPTION
---------------	-------------	-------------

FOLLOWING PARTS NOT ILLUSTRATED

4378950	Filler Kit (BL)
4378951	Filler Kit (WH)
4378952	Filler Kit (AL)
814381	Kit, Pin Hinge
4448950	Screw, Installation

WIRING HARNESS PARTS

4452239	Harness, Latch
4449809	Screw
4455732	Harness, Main
4450831	Ground (M/W)
4450800	Screw
4449809	Screw
4450950	Conduit, Combo
4450800	Screw
313438	Clip, Harness
4452222	Spacer, Harness
4454835	Tie, Cable

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST